

S/N 18018

NICKLE ENGINEERING
 NORMANBY
 PH (06) 2728143

Specialists in multi axle truck & Bus
 Wheel Alignment & on board wheel balancing

We use WATKINS ALIGNMENT SYSTEMS methods proven
 over thousands of alignments New Zealand wide

Name dommetts (FONTERRA)
 Address _____
 Telephone _____
 Vehicle (VIN#) TRAILER
 License F/N 2103
 Mileage _____
 Technician RD
 Time and Date 10:57:48 10/02/08

Specifications TRAILER MULTI AXLE

Left Rear

Min.	Max.	Actual
.....	0.5°
.....	1.8mm

Right Rear

Actual	Min.	Max.
0.2°
2.0mm

Camber
 Toe

Rear

2011 NS
 2013 1255 F
 total toe
 scrub angle

Actual	Min.	Max.
3.9mm
-0.01°	-0.02°	0.02°

Left Rear

Min.	Max.	Actual
.....	0.6°
.....	-0.9mm

Right Rear

Actual	Min.	Max.
0.1°
-1.1mm

Camber
 Toe

Rear

Total Toe
 Thrust Angle

Actual	Min.	Max.
-2.0mm
0.01°	-0.02°	0.02°

Left Rear

Min.	Max.	Actual
.....	0.5°
.....	2.5mm

Right Rear

Actual	Min.	Max.
0.3°
2.4mm

Camber
Toe

Rear

Total Toe
Scrub Angle

Actual	Min.	Max.
4.9mm
0.00°	-0.02°	0.02°

Left Rear

Min.	Max.	Actual
.....	0.4°
.....	-0.6mm

Right Rear

Actual	Min.	Max.
0.5°
-0.5mm

Camber
Toe

Rear


Total Toe
Thrust Angle

Actual	Min.	Max.
-1.0mm
-0.00°	-0.02°	0.02°

R/M 18018

Vehicle Adjustments


Separation:

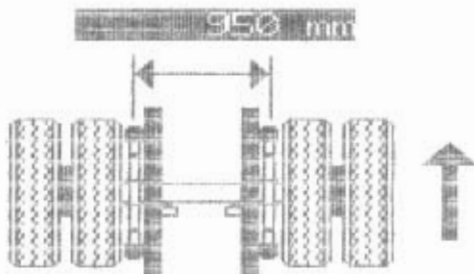

Scrub Angle

0.03mm

Adjustment

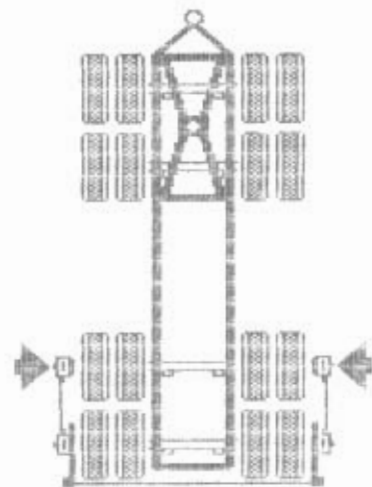

Adjust rear scrub angle, then print summary.

Print
Screen

Identify
Customer


Inspect
Vehicle

HELP

2/14 10015

Vehicle Adjustments

Separation:

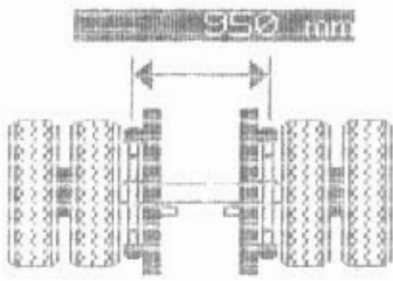


-0.01°

Thrust Angle

0.08mm

Adjustment

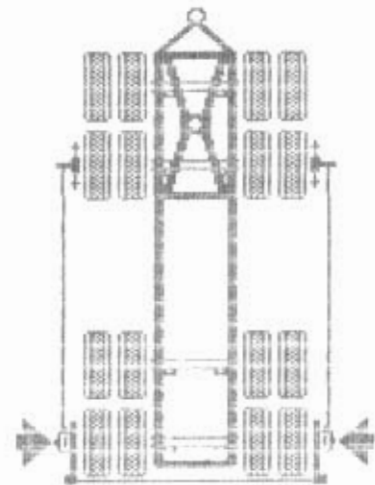

Adjust rear thrust angle, then press "Ready".

Print
Screen


Identify
Customer

Inspect
Vehicle

HELP

Vehicle Adjustments

Separation:

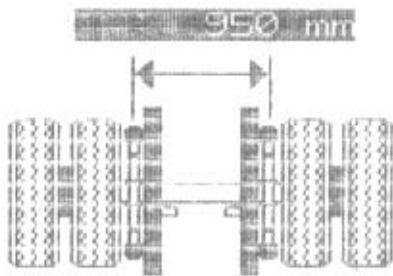


0.42°

Thrust Angle

7.01mm

Adjustment

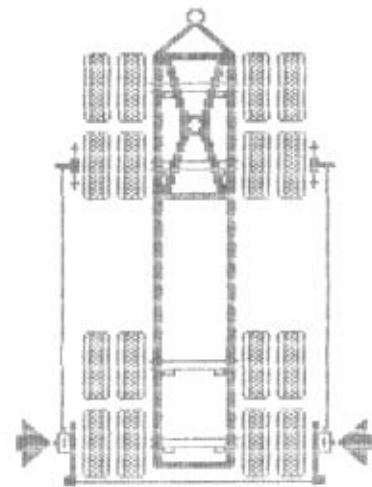

Adjust rear thrust angle, then press "Ready".

Print
Screen


Identify
Customer

Inspect
Vehicle

HELP

Vehicle Adjustments

Separation:

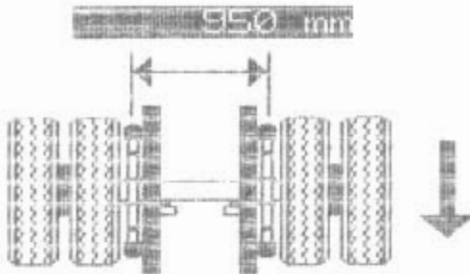


-0.01°

Scrub Angle

0.16mm

Adjustment

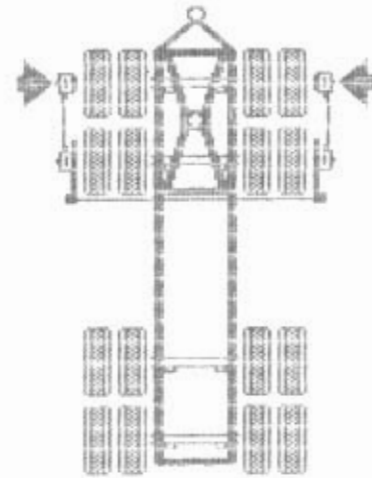

Adjust near scrub angle, then press "Ready".

Print
Screen


Identify
Customer

Inspect
Vehicle

HELP

Vehicle Adjustments

Separation:

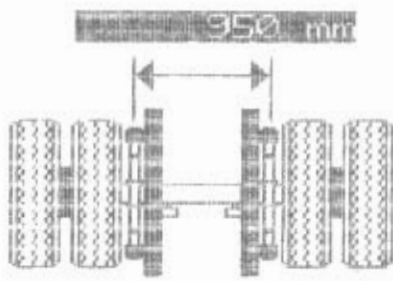


X
-0.44°

Scrub Angle

7.22mm

Adjustment

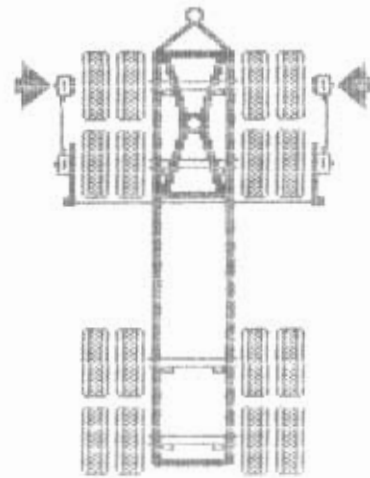

Adjust rear scrub angle, then press "Ready".

Print
Screen


Identify
Customer

Inspect
Vehicle

HELP

Vehicle Adjustments

Separation:

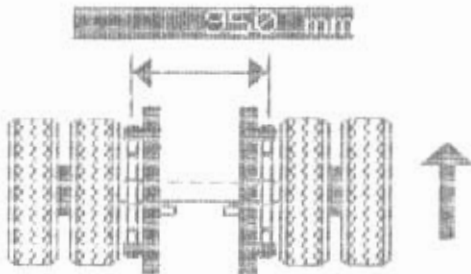


0.01°

Thrust Angle

0.08mm

Adjustment

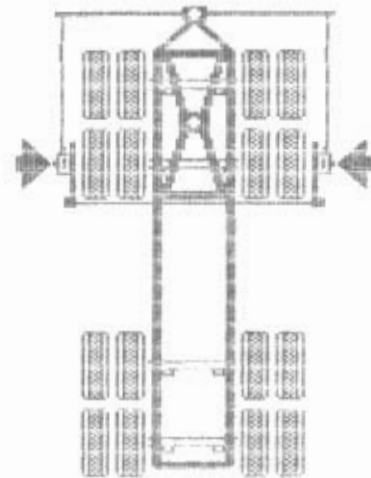


Adjust rear thrust angle, then press "Ready".

Print Screen	Identify Customer	Inspect Vehicle	HELP
-----------------	----------------------	--------------------	------

Vehicle Adjustments

Separation:

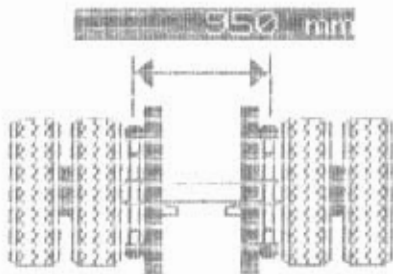


0.47°

Thrust Angle

7.85mm

Adjustment

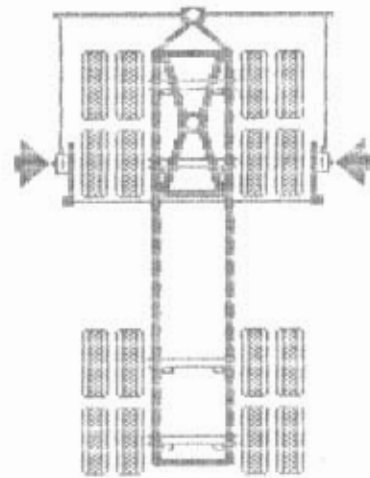

Adjust rear thrust angle, then press "Ready".

Print
Screen

Identify
Customer

Inspect
Vehicle

HELP
