## SUSPENSION MAINTENANCE **TORQUE SETTINGS & PROCEDURES**





Apply marking and inspect visually

Use an impact wrench or extend lever to

L = 2.5m

## U'BOLTS

TIGHTEN U'BOLT NUTS (DIAGONALLY IN THREE STAGES USING TORQUE WRENCH) SHOCK ABSORBER AIR SPRING TOP MOUNTING AIR SPRING BOTTOM MOUNTING

750NM

400NM

**40NM 20NM** 

## PIVOT BOLT-LUBRICATED

- PRETIGHTEN PIVOT BOLT NUT TO 400NM, USE TORQUE WRENCH! (width across flats: 46mm).
- 2. CONTINUE TURNING NUT THROUGH 120deg (TWO FLATS). CORRECTLY FOLLOWING THIS PROCEDURE MEANS NO FURTHER TIGHTENING WILL BE NECESSARY

Retighten u-bolt nuts again after approx. 5,000km Use torque wrench only. The use of impact wrenches is strictly forbidden

