

SERVICE PROCEDURE

PER DAY

- Drain all moisture from air reservoirs
- Wheel mounting nuts and tighten as required as per instructions on label
- Lights and reflectors are performing correctly
- Tyre pressures and remove objects lodged between treads

PER MONTH

- Adjust brakes
- Re-torque all the suspension fasteners - refer label on trailer and later in this manual
- Wheel nuts - refer label on trailer
- Inspect hoses and brake line connections and frayed insulation
- Alignment and tyres - check for condition and proper mating. Tyres with abnormal wear should be rotated to other wheels. Mechanical defects may be corrected at Domett Truck and Trailer Limited.
- Check two speed landing legs.
- Inspect coupler, kingpin, and skid plate or truck coupling and toweye for wear and damage. Make certain all components are operating properly.
- Check suspension and remove objects lodged between units.
- Inspect ball race turntables for free movement and absence of grating and check mounting bolts.
- Lubricate all points with suitable grease

TIPS

Regular maintenance such as lubrication and tension adjustment will assist in keeping cost of operation.

Where possible we suggest that you take your trailer to Domett Truck & Trailer Limited for inspection and adjustment.

Frequent inspection will keep operating costs to a minimum.